

F398D3542 PLACA ELECTRONICA MF 10 FB

ATENTIUNE:

IN CAZ CA O PLACA ELECTRONICA MODEL

F398D3540 PLACA ELECTRONICA MF 10

F398D3541 PLACA ELECTRONICA MF 10 FA

SE INLOCUIESTE CU O PLACA ELECTRONICA TIP MF 10 FB REGLATI
PARAMETRII CONFORM INSTRUCIUNILOR, ASIGURANDU-VA CA

PARAMETRUL 8 “ Selectarea tipului de senzor incalzire”

SA FIE REGLAT LA VALOAREA

1 = Term. sig. + Senzor

Menu-ul Parametri instalator


Placa electronica e dotata cu 11 parametri transparenti: modificabili atat de la telecomanda (menu Parametri service) cat si de la centrala (Menu Parametri instalator, cu exceptia ultimilor trei, 9, 10 si 11):

Nr.	Menu Parametri	Domeniu	Default
1	Putere maxima incalzire	0-100%	100%
2	Selectare tip gaze	0=Metan, 1=GPL	0=Metan
3	Putere aprindere	0 – 60%	50%
4	Timp asteptare incalzire	0=0minute, 1=2,5 minute	1=2,5 minute
5	Post-circulatie pompa incalzire	0=0minute, 1=2,5 minute	1=2,5 minute
6	Punct maxim de reglaj utilizator, incalzire	30°C, 40°C, 85°C	85°C
7	Punct maxim de reglaj utilizator, apa calda menaj.	0=55°C, 1=65°C	0=55°C
8	Selectionare tip senzor incalzire	0 = Senzor dublu 1 = Term. sig. + Senzor	0 = Senzor dublu
9	Panta de incalzire	1-20°C/min	10°C/min
10	Frecventa tensiunii din retea	0=50Hz, 1=60Hz	0=50Hz
11	Stingere arzator in apa calda menajera	0=Fix, 1=legat de punct reglaj	1=punct reglaj (set pt.)

Modificarea de la crono-comanda la distanta se face intrand in menu-ul Parametri service al acesteia (vezi manualul respectiv); ordinea si domeniul corespund exact cu cele prezentate in tabela.

Modificarea de la placa electronica se face in modul care urmeaza.

Parametrii desemnati in tabela de mai sus cu P1 - P8 pot fi vizualizati si eventual modificati de la menu-ul Parametri instalator, cu ajutorul codului format de led-uri si a pozitiei selectorului pentru diferite intervale de timp. Metoda de a accede, vizualiza si/sau modifica o serie de parametri si de iesire din menu este descrisa cu ajutorul diagramei de flux care urmeaza.

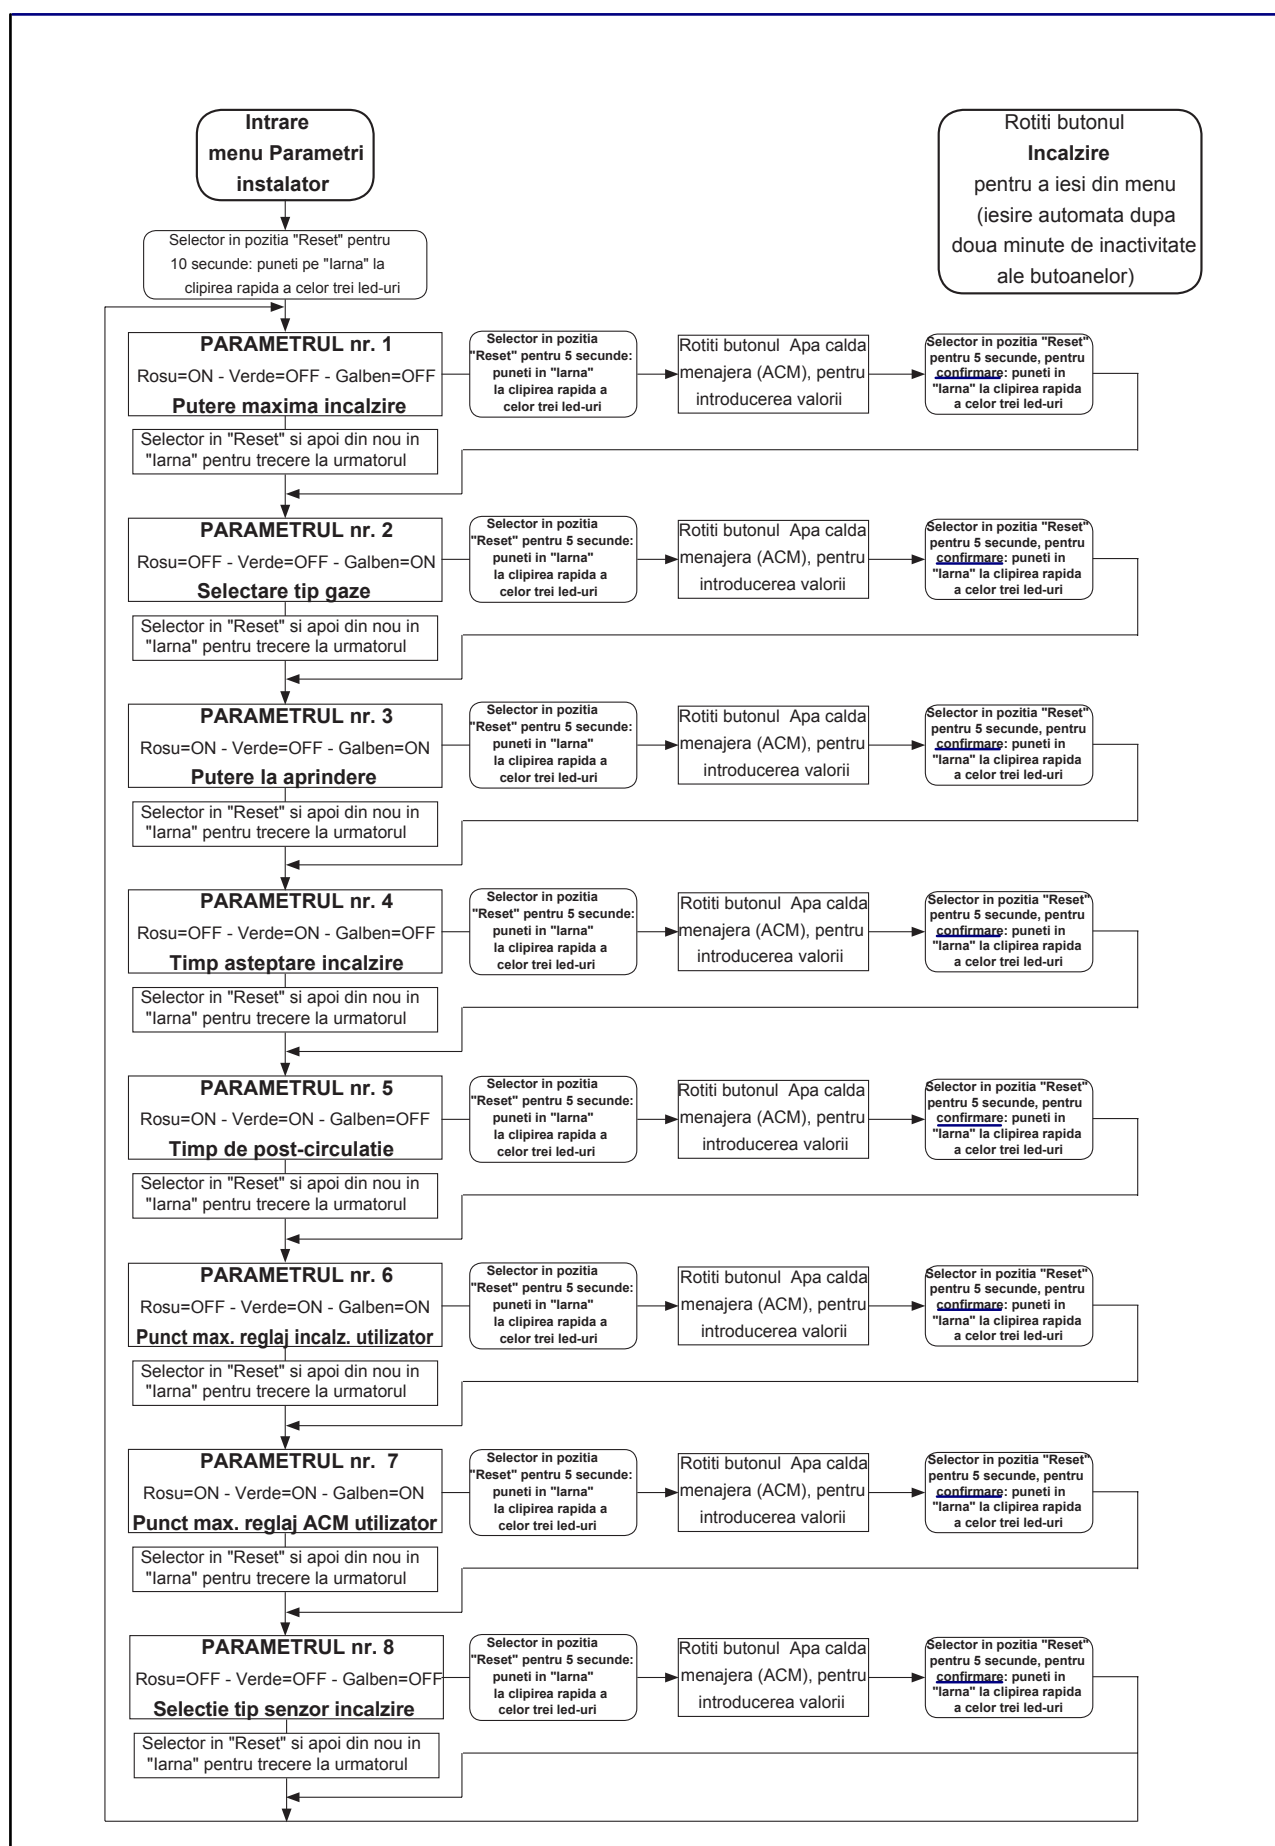

Dupa stabilirea parametrului de setat, se vor utiliza tabelele urmatoare de conversiune pentru a intelege, dupa cum clipesc led-urile, ce valoare se introduce. Cu OFF se intelege led stins, cu ON se intelege led aprins, iar cu ON BL se intelege led clipitor.

Rosu	Verde	Galben	Putere maxima incalzire
OFF	OFF	OFF	00-11%
ON BL	OFF	OFF	11-23%
OFF	OFF	ON BL	23-36%
ON BL	OFF	ON BL	36-49%
OFF	ON BL	OFF	49-61%
ON BL	ON BL	OFF	61-74%
OFF	ON BL	ON BL	74-85%
ON BL	ON BL	ON BL	85-100%

Rosu	Verde	Galben	Selectia tipului de gaze
OFF	OFF	OFF	Metan
ON BL	OFF	OFF	GPL

Rosu	Verde	Galben	Putere aprindere
OFF	OFF	OFF	00-06%
ON BL	OFF	OFF	06-13%
OFF	OFF	ON BL	13-21%
ON BL	OFF	ON BL	21-29%
OFF	ON BL	OFF	29-36%
ON BL	ON BL	OFF	36-44%
OFF	ON BL	ON BL	44-51%
ON BL	ON BL	ON BL	51-60%

Rosu	Verde	Galben	Timp asteptare incalzire
OFF	OFF	OFF	00 minute
ON BL	OFF	OFF	2,5 minute

Rosu	Verde	Galben	Post-circulatie pompa
OFF	OFF	OFF	00 minute
ON BL	OFF	OFF	2,5 minute

Rosu	Verde	Galben	Punct maximum reglaj incalzire
OFF	OFF	OFF	30°C
ON BL	OFF	OFF	40°C
OFF	OFF	ON BL	85°C

Rosu	Verde	Galben	Punct maximum reglaj apa calda menaj.
OFF	OFF	OFF	55°C
ON BL	OFF	OFF	65°C

Rosu	Verde	Galben	Selectie tip senzor incalzire
OFF	OFF	OFF	Senzor dublu
ON BL	OFF	OFF	Term. sig. + senzor